

## PARTS LIST

Note: The parts marked "Δ" may cause undue microwave exposure.

The parts marked "\*" are used in voltage more than 250V.

REF. NO.	PART NO.	DESCRIPTION	Q'TY	CODE	
<b>ELECTRIC PARTS</b>					
AM	RMOTDA234WRE0	Antenna motor	1	AR	
*	C	RC-QZA320WRZZ	High voltage capacitor	1	AV
	F1	QFS-CA026WRZZ	Fuse F10A	1	AH
*	F2	QFS-IA002WRE0	High voltage fuse 0.75 A	1	AQ
	FM	RMOTEA378WRE0	Fan motor	1	AU
Δ*	MG	RV-MZA299WRE0	Magnetron	1	BK
	OL	RLMPTA078WRE0	Oven lamp	1	AL
	OL	RLMPTA069WRE0	Oven lamp (Interchangeable)	1	AK
	SW1	QSW-MA085WRE0	Primary interlock relay control switch	1	AF
	SW2	QSW-MA085WRE0	2nd. interlock switch	1	AF
	SW3	QSW-MA086WRE0	Monitor switch	1	AF
*	T	RTRN-A717WRZZ	High voltage transformer	1	BP
	TC1	RTHM-A123WRZZ	Thermal cut-out 125 deg. (OVEN)	1	AK
	TC1	RTHM-A096WRE0	Thermal cut-out 125 deg. (OVEN) (Interchangeable)	1	AK
	TC2	RTHM-A120WRE0	Thermal cut-out 145 deg. (MAG)	1	AH
	TC2	RTHM-A080WRE0	Thermal cut-out 145 deg. (MAG) (Interchangeable)	1	AP
	1- 1	QACC-A148WRZZ	Power supply cord	1	AW
*	1- 2	FH-DZA091WRK0	High voltage rectifier assembly	1	AY
	1- 3	FPWBFA367WRKZ	Noise filter	1	AZ
	1- 4	QSOCLA024WRE0	Oven lamp socket	1	AH

### CABINET PARTS

2- 1	GCABUA672WRP0	Outer case cabinet	1	BH
2- 2	GDAI-A318WRW0	Base plate	1	AV
2- 3	GCOVHA406WRW0	Base plate cover	1	AQ
2- 4	GLEGPA074WRE0	Foot	2	AC
2- 5	GLEGPA076WRE0	Leg	1	AF

### CONTROL PANEL PARTS

3- 1	DPWBF911WRU0	Control unit	1	BP
3- 1A	QCNCMA234DRE0	3-pin connector (CN-A)	1	AC
3- 1B	QCNCMA275DRE0	2-pin connector (CN-B)	1	AB
3- 1C	QCNCWA057DRE0	12-pin connector (CN-G)	1	AF
C1	VCEAB51EW228M	Capacitor 2200 uF 25V	1	AE
C2	RC-KZA087DRE0	Capacitor 0.1 uF 50V	1	AA
C3	VCEAB31AW476M	Capacitor 47 uF 10V	1	AA
C4	RC-KZA087DRE0	Capacitor 0.1 uF 50V	1	AA
C5	VCEAB31AW476M	Capacitor 47 uF 10V	1	AA
C6	RC-KZA087DRE0	Capacitor 0.1 uF 50V	1	AA
C7	VCKYD11CY103N	Capacitor 0.01 uF 16V	1	AA
C8-9	RC-KZA087DRE0	Capacitor 0.1 uF 50V	2	AA
C10	VCEAB31EW477M	Capacitor 470 uF 25V	1	AC
C11	VCEAB31HW477M	Capacitor 470 uF 50V	1	AE
C13	VCEAB31EW106M	Capacitor 10 uF 25V	1	AA
C20	VCEAB31HW104M	Capacitor 0.1 uF 50V	1	AM
C21	VCEAB31EW106M	Capacitor 10 uF 25V	1	AA
C30	VCEAB31AW476M	Capacitor 47 uF 10V	1	AA
C31	VCKYD11CY103N	Capacitor 0.01 uF 16V	1	AA
C70	VCKYD11CY103N	Capacitor 0.01 uF 16V	1	AA
CF1	RCRS-A012DRE0	Ceramic resonator CST4.00MGW	1	AD
D1-6	RH-DZA006PRE0	Diode (1N4002)	6	AD
D20-21	VHD1SS270A/-1	Diode (1SS270A)	2	AA
D23	VHD1SS270A/-1	Diode (1SS270A)	1	AA
D70	VHD1SS270A/-1	Diode (1SS270A)	1	AA
IC1	RH-IZA897DRE0	LSI	1	AV
IC2	RH-IZA980DRE0	IC (AT24C02)	1	AD
IC3	RIC--A025BDE0	IC (KID65004AP)	1	AE
LED1	VHPSL3966T/1B	Light emitting diode	1	AS
Q1	RIC--A022BDE0	IC (KIA7805P1)	1	AE
Q2	VSDTA123ES/-3	Transistor (DTA123ES)	1	AA
Q3	VSDTC143ES/-3	Transistor (DTC143ES)	1	AB
Q3	VSKRC101M// -3	Transistor (KRC101M) (Interchangeable)	1	AB
Q20	VSDTB143ES/-3	Transistor (DTB143ES)	1	AC
Q20	VSKRA223M// -3	Transistor (KRA223M) (Interchangeable)	1	AB
Q21	VSDTC143ES/-3	Transistor (DTC143ES)	1	AB
Q21	VSKRC101M// -3	Transistor (KRC101M) (Interchangeable)	1	AB
Q22	VSDTD143ES/-3	Transistor (DTD143ES)	1	AC
Q22	VSKRC243M// -3	Transistor (KRC243M) (Interchangeable)	1	AB
Q24	VS2SC1740S/-3	Transistor (2SC1740)	1	AB
R3-5	VRD-B12EF472J	Resistor 4.7k ohm 1/4W	3	AA
R6	VRD-B12EF102J	Resistor 1k ohm 1/4W	1	AA
R30	VRD-B12EF101J	Resistor 100 ohm 1/4W	1	AA
R31	VRD-B12EF153J	Resistor 15k ohm 1/4W	1	AA

Note: The parts marked "Δ" may cause undue microwave exposure.  
The parts marked "\*" are used in voltage more than 250V.

REF. NO.	PART NO.	DESCRIPTION	Q'TY	CODE
R32	VRD-B12EF272J	Resistor 2.7k ohm 1/4W	1	AA
R33	VRD-B12EF472J	Resistor 4.7k ohm 1/4W	1	AA
R40	VRD-B12EF272J	Resistor 2.7k ohm 1/4W	1	AA
R50-58	VRD-B12EF101J	Resistor 100 ohm 1/4W	9	AA
R70-71	VRD-B12EF472J	Resistor 4.7 ohm 1/4W	2	AA
R80-88	VRD-B12EF472J	Resistor 4.7 ohm 1/4W	9	AA
R90	VRS-B13AA101J	Resistor 100 ohm 1W	1	AA
RY2	RRLY-A092DRE0	Relay (VRB18SP)	1	AL
RY3	RRLY-A093DRE0	Relay (VRB18)	1	AL
SP1	RALM-A014DRE0	Buzzer (PKM22EPT)	1	AG
T1	RTRNPA131DRE0	Touch control transformer	1	AR
VRS1	RH-VZA032DRE0	Varistor (10G471K)	1	AE
ZD2	VHEHZ4A2///-1	Zener diode (HZ4A2)	1	AA
ZD3	VHEHZ201///-1	Zener diode (HZ20-1)	1	AA
3- 2	FPNLCB773WRKZ	Control panel frame with key unit	1	BA
3- 2-1	FUNTKB146WREZ	Key unit	1	AW
3- 2-2	GCOVAA260WRP0	C/P case	1	BA
3- 2-3	GMADIA109WRF0	Display window	1	AE
3- 3	XEPSD30P08XS0	Screw; 3mm x 8mm	6	AA

## OVEN PARTS

Δ	4- 1	FGLSPA062WRE0	Ceramic shelf	1	BL
Δ	4- 2	DOVN-A514WRY0	Oven cavity	1	BU
Δ	4- 3	MLEVPA227WRF0	Latch switch lever A	1	AF
Δ	4- 4	MLEVPA228WRF0	Latch switch lever B	1	AF
Δ	4- 5	MLEVPA229WRF0	Latch switch lever C	1	AF
	4- 6	MSPRCA108WRE0	Latch lever spring	3	AC
	4- 7	MSPRTA191WRE0	Switch lever B spring	1	AC
Δ	4- 8	PHOK-A121WRFZ	Latch hook	1	AG
	4- 9	FDUC-A362WRYZ	Steam duct sub assembly	1	BB
	4-10	PSKR-A351WRP0	Steam guide	1	AY
	4-11	LBNDKA139WRW0	HV capacitor holder	1	AR
	4-12	NFANJA029WRE0	Fan blade	1	AK
	4-13	PDUC-A697WRF0	Fan duct	1	AM
	4-14	FPLT-A007WRY0	Stirrer antenna assembly	1	BB
	4-15	PCUSUA507WRP0	Cushion	1	AC
	4-16	PCUSGA378WRP0	Cushion	1	AL
	4-17	PSPA-A112WRE0	Mica washer	1	AC
	4-18	LANGFA199WRWZ	Chassis support	1	AH
	4-19	NSFTPA035WRFZ	Antenna motor shaft	1	AQ
	4-20	PSKR-A359WRW0	Air guide	1	AM
	4-21	PSKR-A349WRP0	Steam duct barrier	1	AF
	4-22	PFILWA060WRP0	Lamp filter	1	AD
	4-23	PDUC-A722WRF0	Air intake duct	1	AF
	4-24	PCUSGA249WRP0	Cushion	1	AA
	4-25	PCUSUA235WRP0	Cushion	1	AE
	4-26	PCUSUA511WRP0	Cushion	2	AC
	4-27	PCUSUA329WRP0	Cushion	1	AC
	4-28	PCUSUA514WRP0	Cushion	1	AB
	4-29	PPACGA171WRE0	Cushion	1	AK
	4-30	PCUSUA515WRP0	Cushion	1	AD
	4-31	PSHEPA668WRE0	Cover	1	AK
	4-32	PCLICA034WRE0	Hand clip	3	AD
	4-33	PSHEPA673WRE0	S/Film	1	AD
	4-34	GLEGPA056WRE0	Leg	1	AD
	4-35	LANGQA556WRMZ	Earth angle	1	AL

## DOOR PARTS

Δ	5- 1	FDORFA322WRT0	Door panel assembly	1	AZ
	5- 2	PSHEPA649WRE0	Sealer film	1	AB
Δ	5- 3	FANGKA206WRY0	Latch angle assembly	1	AW
	5- 4	FCOV-A005WRKZ	Door case assembly	1	BH
	5-4-1	LSTPPA180WRF0	Glass stopper R	1	AK
	5-4-2	LSTPPA182WRF0	Glass stopper U	1	AN
	5-4-3	PGLSPA522WRE0	Front door glass	1	AQ
	5-4-4	XCPD40P08000	Screw : 4mm x 8mm	6	AA
	5-4-5	PSLDMA198WREZ	Sealer plate	1	BB
	5- 5	GWAKPA580WRM0	Door handle	1	AQ
	5- 6	JHNDMA040WRW0	Handle lever	1	AN
Δ	5- 7	LANGKA874WRW0	Latch lever	1	AR
Δ	5- 8	LSTPPA181WRF0	Latch head	2	AL
	5- 9	MSPRTA190WRE0	Latch spring	1	AD
	5-10	PCUSUA506WRP0	Cushion	1	AC
	5-11	XEPSD40P06000	Screw : 4mm x 6mm	1	AB
	5-12	PSHEPA686WRE0	Panel sheet	2	AK
	5-13	PSHEPA687WRE0	Panel sheet	1	AK

Note: The parts marked "Δ" may cause undue microwave exposure.  
The parts marked "\*" are used in voltage more than 250V.

REF. NO.	PART NO.	DESCRIPTION	Q'TY	CODE
5-14	LANGJA020WRP0	Earth angle	1	AD
5-15	PCUSUA505WRP0	Cushion	1	AC
5-16	XEBSD38P08000	Screw : 3.8mm x 8mm	4	AA
5-17	GCOVHA407WRF0	Choke cover	1	AM
5-18	HBDGCA117WREZ	Door badge	1	AG
5-19	XEPSD40P25K00	Screw : 4mm x 25mm	2	AB
5-20	PCUSUA508WRP0	Cushion	1	AC
5-21	PCUSGA514WRP0	Cushion	1	AG

#### MISCELLANEOUS

6- 1	TINSA101WRRZ	Instruction book	1	AP
6- 2	TCAUAA249WRR0	Caution label	1	AE
6- 3	FW-VZB998WREZ	Main wire harness	1	AY
6- 4	TCAUHA276WRRZ	Caution sheet	1	AH
6- 5	TCAUHA168WRR0	H caution label	1	AH
6- 6	TLABMA585WRR0	Menu sticker	1	AG

#### SCREWS, NUTS AND WASHERS


7- 1	XHPSD40P08K00	Screw : 4mm x 8mm	5	AA
7- 2	XEPSD40P25000	Screw : 4mm x 25mm	2	AA
7- 3	XOTSD40P12RV0	Screw : 4mm x 12mm	12	AA
7- 4	LX-CZ0052WRE0	Special screw	2	AA
7- 5	LX-EZA042WRE0	Special screw	2	AB
7- 6	XBPPW40P04000	Screw : 4mm x 4mm	1	AB
7- 7	XFPSP40P08000	Screw : 4mm x 8mm	1	AA
7- 8	XHTSD40P12RV0	Screw : 4mm x 12mm	1	AA
7- 9	XHPSD30P06000	Screw : 3mm x 6mm	1	AA
7-10	XHTSD40P08RV0	Screw : 4mm x 8mm	3	AA
7-11	XOTSD40P12000	Screw : 4mm x 12mm	4	AA
7-12	XOTSE40P08000	Screw : 4mm x 8mm	1	AA
7-13	XOTWW40P10000	Screw : 4mm x 10mm	4	AA
7-14	LX-WZA035WRE0	Special washer	1	AB
7-15	XHPSD40P08000	Screw : 4mm x 8mm	4	AA

#### HOW TO ORDER REPLACEMENT PARTS

To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER    2. REF. NO.    3. PART NO.    4. DESCRIPTION

#### PACKING AND ACCESSORIES

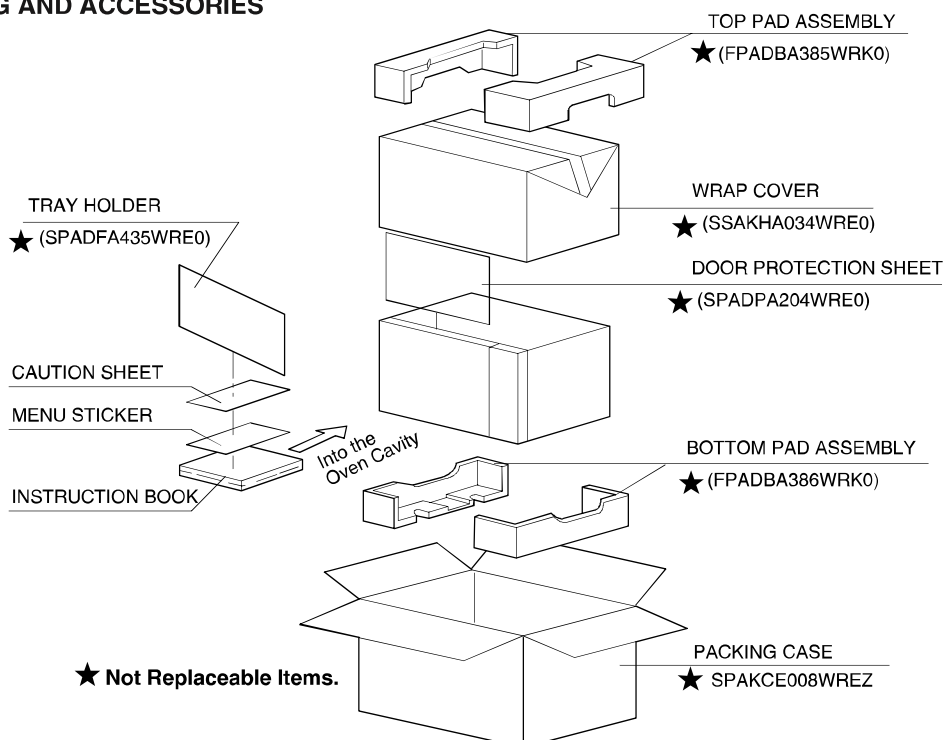

# OVEN AND CABINET PARTS

