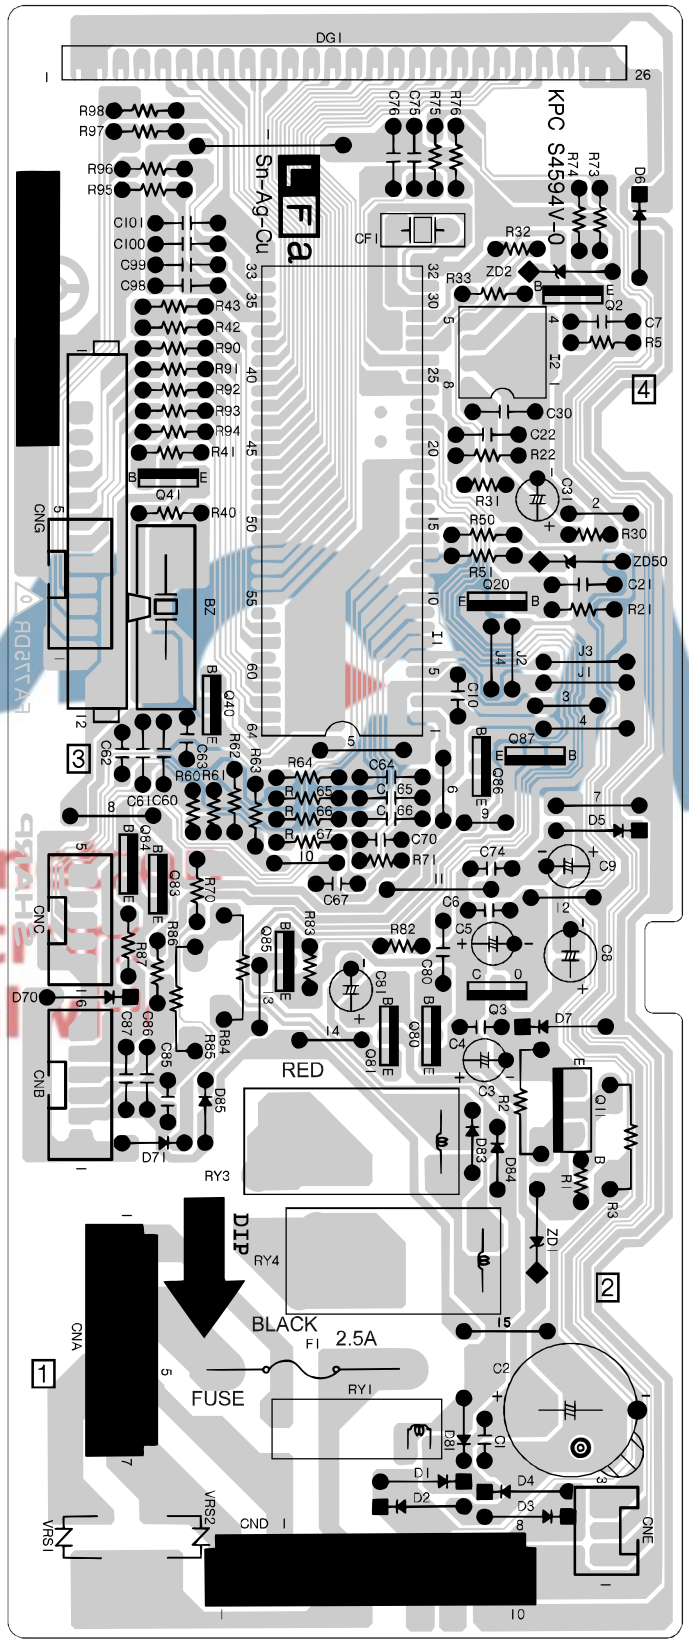



Figure S-3. Printed Wiring Board

# PARTS LIST

**Note: The parts marked "Δ" may cause undue microwave exposure.**
**The parts marked "*" are used in voltage more than 250V.**

| | REF. NO. | PART NO. | DESCRIPTION | Q'TY | CODE |
|---|---|---|---|---|---|
| | | | **ELECTORIC PARTS** | | |
| | BM | FMOTEA482WRKZ | Blower motor | 1 | BH |
| * | C1, C2 | RC-QZA320WRZZ | High voltage capacitor | 2 | AV |
| | F1,F2 | QFS-CA026WRZZ | Fuse F10A | 2 | AH |
| | F3 | QFS-CA017WRE0 | Weak point A017 | 1 | AF |
| * | F4,F5 | QFS-IA002WRE0 | High voltage fuse 0.75A/ 5kV | 2 | AQ |
| Δ* | MG1 | RV-MZA322WREZ | Magnetron (Upper) | 1 | BB |
| Δ* | MG2 | RV-MZA322WREZ | Magnetron (Lower) | 1 | BB |
| | OL | RLMPTA028WRE0 | Oven lamp | 1 | AK |
| | SM | RMOTDA238WRZZ | Antenna motor | 2 | AR |
| | SW1 | QSW-MA085WRE0 | Interlock switch | 1 | AF |
| | SW2 | QSW-MA085WRE0 | Interlock switch | 1 | AF |
| | SW3 | QSW-MA086WRE0 | Monitor switch | 1 | AF |
| | SW4 | QSW-MA086WRE0 | Monitor switch | 1 | AF |
| | SW5 | QSW-MA085WRE0 | Stop switch | 1 | AF |
| * | T1, T2 | RTRN-A599WRE0 | High voltage transformer | 2 | BM |
| | T3 | RTRNPA005WRZZ | Touch control transformer | 1 | AQ |
| | TF1 | QFS-TA014WRE0 | Temperature fuse 150C (Upper magnetron) | 1 | AG |
| | TF2 | QFS-TA014WRE0 | Temperature fuse 150C (Lower magnetron) | 1 | AG |
| | TF3 | QFS-TA015WRE0 | Temperature fuse 120C (Exhaust) | 1 | AG |
| | TH1 | FH-HZA070WRE0 | Magnetron thermistor (Upper) | 1 | AM |
| | TH2 | FH-HZA070WRE0 | Magnetron thermistor (Lower) | 1 | AM |
| | TH3 | FH-HZA070WRE0 | Exhaust thermistor | 1 | AM |
| | 1- 1 | FACCVA013WRK0 | Power supply cord | 1 | BG |
| | 1- 2 | QSOCLA024WRE0 | Oven lamp socket | 1 | AH |
| * | 1- 3 | FW-QZA117WRK0 | High voltage rectifier assembly | 1 | AU |
| | 1- 4 | FPWBFA335WRE0 | Noise filter | 1 | AX |
| | 1- 5 | QFSHDA019WRE0 | Fuse holder | 2 | AH |
| | | | **CABINET PARTS** | | |
| | 2- 1 | GDAI-A353WRTZ | Base plate | 1 | BB |
| | 2- 2 | GCABUA860WRPZ | Outer case cabinet | 1 | BD |
| | 2- 3 | GCOVAA283WRW0 | Rear cabinet | 1 | AX |
| | 2- 4 | FFTASA064WRY0 | Oven lamp access cover assembly | 1 | AN |
| | 2- 4-1 | PCUSUA585WRPZ | Cushion | 1 | AF |
| | 2- 4-2 | PREFHA059WRP0 | Reflector | 1 | AF |
| | 2- 5 | FFPF-A016WRK0 | Vibration-proof sheet | 1 | AU |
| | 2- 6 | PSHEGA007WRE0 | Rubber sheet B | 2 | AE |
| | | | **CONTROL PANEL PARTS** | | |
| | 3- 1 | DPWBFC366WRKZ | Control unit | 1 | BN |
| | 3- 1A | QCNCMA314DRE0 | 5-pin connector (CN-A) | 1 | AC |
| | 3- 1B | QCNCMA413DRE0 | 6-pin connector (CN-B) | 1 | AC |
| | 3- 1C | QCNCMA420DRE0 | 5-pin connector (CN-C) | 1 | AK |
| | 3- 1D | QCNCMA493DRZZ | 6-pin connector (CN-D) | 1 | AE |
| | 3- 1E | QCNCMA381DRE0 | 5-pin connector (CN-G) | 1 | AD |
| | 3- 1F | RV-KXA053DRE0 | Fluorescent display tube | 1 | AW |
| | 3- 1G | PCUSGA359WRP0 | Cushion | 2 | AC |
| | 3- 1H | QCNCMA338DRE0 | 3-pin connector (CN-E) | 1 | AB |
| | BZ | RALM-A014DRE0 | Buzzer (PKM22EPT) | 1 | AG |
| | C1 | VCKYD11HF104Z | Capacitor 0.1uF 50V | 1 | AB |
| | C2 | VCEAG51HW228M | Capacitor 2200uF 50V | 1 | AH |
| | C3 | VCEAG31HW106M | Capacitor 10uF 50V | 1 | AB |
| | C4 | VCKYD11HF104Z | Capacitor 0.1uF 50V | 1 | AB |
| | C5 | VCEAG31HW106M | Capacitor 10uF 50V | 1 | AB |
| | C6-7 | VCKYD11CY103N | Capacitor 0.01uF 16V | 2 | AA |
| | C8 | VCEAG31CW107M | Capacitor 100uF 16V | 1 | AC |
| | C9 | VCEAG31HW106M | Capacitor 10uF 50V | 1 | AB |
| | C10 | VCKYD11HF104Z | Capacitor 0.1uF 50V | 1 | AB |
| | C21 | VCKYD11HF104Z | Capacitor 0.1uF 50V | 1 | AB |
| | C22 | VCKYD11CY103N | Capacitor 0.01uF 16V | 1 | AA |
| | C30 | VCKYD11CY103N | Capacitor 0.01uF 16V | 1 | AA |
| | C31 | VCEAG31HW106M | Capacitor 10uF 50V | 1 | AB |
| | C60 | VCKYD11CY103N | Capacitor 0.01uF 16V | 1 | AA |
| | C62-63 | VCKYD11CY103N | Capacitor 0.01uF 16V | 2 | AA |
| | C70 | VCKYD11CY103N | Capacitor 0.01uF 16V | 1 | AA |
| | C74 | VCKYD11HF104Z | Capacitor 0.1uF 50V | 1 | AB |
| | C75-76 | VCKYD11CY103N | Capacitor 0.01uF 16V | 2 | AA |
| | C80 | VCKYD11HF104Z | Capacitor 0.1uF 50V | 1 | AB |
| | C81 | VCEAG31HW106M | Capacitor 10uF 50V | 1 | AB |
| | C98-100 | VCKYD11HB331K | Capacitor 330pF 50V | 3 | AA |
| | CF1 | RCRS-A010DRE0 | Ceramic resonator (CST4.00MGW) | 1 | AD |
| | D1-7 | VHD10EDB10+-1T | Diode (10EDB10) | 7 | AB |
| | D70 | VHD10EDB10+-1T | Diode (10EDB10) | 1 | AB |

| REF. NO. | PART NO. | DESCRIPTION | Q'TY | CODE |
|---|---|---|---|---|
| D71 | VHD1SS133//-2 | Diode (1SS133) | 1 | AA |
| D81 | VHD1SS133//-2 | Diode (1SS133) | 1 | AA |
| D83-84 | VHD1SS133//-2 | Diode (1SS133) | 2 | AA |
| F1 | QFS-IA001KKZZ | Fuse 2.5A 50V | 1 | AD |
| I- 1 | RH-IXA222DRZZ | LSI | 1 | AU |
| I- 2 | VHICAT24W16-1 | EEPROM | 1 | AF |
| Q2 | VSKRA101M//-3 | Transistor (KRA101M) | 1 | AB |
| Q3 | VHIKIA79L05-3 | Transistor (KIA79L05P) | 1 | AE |
| Q11 | VS2SB953-PQ-4 | Transistor (2SB953) | 1 | AG |
| Q20 | VSKRA101M//-3 | Transistor (KRA101M) | 1 | AB |
| Q40 | VSKRA101M//-3 | Transistor (KRA101M) | 1 | AB |
| Q41 | VS2SB1238//-3 | Transistor (2SB1238) | 1 | AA |
| Q80 | VSKRA101M//-3 | Transistor (KRA101M) | 1 | AB |
| Q81 | VSDTD143ES/-3 | Transistor (DTD143ES) | 1 | AC |
| Q86-87 | VSDTB143ES/-3 | Transistor (DTB143) | 2 | AC |
| R1 | VRD-B12EF152J | Resistor 1.5k ohm 1/4W | 1 | AA |
| R2 | VRS-B13AA271J | Resistor 270 ohm 1W | 1 | AA |
| R3 | VRS-B13AA151J | Resistor 150 ohm 1W | 1 | AA |
| R5 | VRD-B12EF103J | Resistor 10k ohm 1/4W | 1 | AA |
| R21 | VRD-B12EF563J | Resistor 56k ohm 1/4W | 1 | AA |
| R22 | VRD-B12EF472J | Resistor 4.7k ohm 1/4W | 1 | AA |
| R30 | VRD-B12EF101J | Resistor 100 ohm 1/4W | 1 | AA |
| R31 | VRD-B12EF153J | Resistor 15k ohm 1/4W | 1 | AA |
| R32 | VRD-B12EF272J | Resistor 2.7k ohm 1/4W | 1 | AA |
| R33 | VRD-B12EF103J | Resistor 10k ohm 1/4W | 1 | AA |
| R40 | VRD-B12EF332J | Resistor 3.3k ohm 1/4W | 1 | AA |
| R41 | VRD-B12EF203J | Resistor 20k ohm 1/4W | 1 | AA |
| R42 | VRD-B12EF393J | Resistor 39k ohm 1/4W | 1 | AA |
| R43 | VRD-B12EF103J | Resistor 10k ohm 1/4W | 1 | AA |
| R60 | VRD-B12EF333J | Resistor 33k ohm 1/4W | 1 | AA |
| R62-63 | VRD-B12EF112J | Resistor 1.1k ohm 1/4W | 2 | AA |
| R64-65 | VRD-B12EF472J | Resistor 4.7k ohm 1/4W | 2 | AA |
| R67 | VRD-B12EF472J | Resistor 4.7k ohm 1/4W | 1 | AA |
| R70 | VRD-B12EF101J | Resistor 100 ohm 1/4W | 1 | AA |
| R71 | VRD-B12EF472J | Resistor 4.7k ohm 1/4W | 1 | AA |
| R73-74 | VRD-B12EF104J | Resistor 100k ohm 1/4W | 2 | AA |
| R75-76 | VRD-B12EF472J | Resistor 4.7k ohm 1/4W | 2 | AA |
| R93-97 | VRD-B12EF472J | Resistor 4.7k ohm 1/4W | 5 | AA |
| RY1 | RRLY-B004MRE0 | Relay (FTR-F3AA024E) | 1 | AF |
| RY3-4 | RRLY-A113DRE0 | Relay (DU24D1-1PR(M)) | 2 | AM |
| VRS1 | VHV10V471K--1 | Varistor (TNR10V471K) | 1 | AD |
| ZD1 | VHEHZ161//-1 | Zener diode (HZ16-1) | 1 | AA |
| ZD2 | VHEHZ4C3//-1 | Zener diode (HZ4C3) | 1 | AA |
| 3- 2 | FPNLCB775WRKZ | Control panel frame with key unit assembly | 1 | BB |
| 3- 2-1 | GMADIA067WRF0 | Display window | 1 | AE |
| 3- 2-2 | HDECAA245WRPZ | Decoration metal fittings | 1 | AU |
| 3- 2-3 | HPNLCB838WRFZ | Control panel | 1 | AN |
| 3- 2-4 | PCUSUA417WRP0 | Cushion | 1 | AB |
| 3- 3 | LANGTA243WRW0 | Control panel mounting angle | 1 | AF |
| 3- 4 | XEPSD30P10XS0 | Screw : 3mm x 10mm | 11 | AA |
| 3- 5 | XEPSD40P12000 | Screw : 4mm x 12mm | 2 | AA |
| 3- 6 | PCUSGA638WRPZ | Cushion | 2 | |
| 3- 7 | JKNBKA510WRM0 | Knob | 1 | AE |
| 3- 8 | DPWBFC373WRKZ | Rotary encoder unit | 1 | AG |
| 3-8-1 | RVR-BA018WRE0 | Rotary encoder | 1 | |
| 3-8-2 | FW-VZA289DRZZ | Lead wire harness (3-pin) | 1 | AE |
| 3- 9 | LANGTA304WRP0 | Rotary encoder mounting plate | 1 | AD |
| 3- 10 | JBTN-A895WRM0 | Select button | 4 | AE |
| 3- 11 | JBTN-A896WRM0 | Start button | 1 | AE |
| 3- 12 | DPWBFC372WRKZ | Switch unit assembly | 1 | AH |
| 3- 12-1 | FW-VZA165DRE0 | Lead wire harness (2-pin) | 1 | AF |
| 3- 12-2 | FW-VZA287DRZZ | Lead wire harness (5-pin) | 1 | AF |
| 3- 12-3 | QSW-PA025DRE0 | Tact switch (SW1-SW5) | 5 | AD |
| 3- 13 | PCUSUA404WRP0 | Select cushion | 4 | AC |
| 3- 14 | PZETEA088WRPZ | Insulater | 1 | AH |
| 3- 15 | MSPRPA082WRE0 | Spring | 1 | AD |
| 3- 16 | XHTSD40P08RV0 | Screw : 4mm x 8mm | 1 | AA |
| 3- 17 | PSHEGA005WRP0 | Water proof sheet | 1 | AE |
| 3- 18 | LX-NZ0068WRE0 | Special nut | 1 | AA |

## OVEN PARTS

| | | | | | |
|---|---|---|---|---|---|
| | 4- 1 | PCLICA042WREZ | Chassis clip | 4 | AC |
| | 4- 2 | FDUC-A345WRY0 | Exhaust duct assembly | 1 | AP |
| Δ | 4- 3 | FOVN-A444WRY0 | Oven cavity | 1 | BS |
| | 4- 4 | PFILWA053WRP0 | Oven light screen (Inside) | 1 | AE |
| | 4- 5 | MLEVPA153WRF0 | Switch lever A | 1 | AC |
| | 4- 6 | MLEVPA154WRF0 | Switch lever B | 1 | AC |

**Note: The parts marked "Δ" may cause undue microwave exposure.**
**The parts marked "*" are used in voltage more than 250V.**

| | REF. NO. | PART NO. | DESCRIPTION | Q'TY | CODE |
|---|---|---|---|---|---|
| | 4- 7 | MLEVPA155WRF0 | Switch lever C | 1 | AC |
| | 4- 8 | MSPRCA075WRE0 | Switch spring A | 1 | AB |
| | 4- 9 | MSPRCA076WRE0 | Switch spring B | 2 | AB |
| Δ | 4-10 | PHOK-A081WRF0 | Latch hook | 1 | AP |
| Δ | 4-11 | MHNG-A216WRM0 | Lower oven hinge | 1 | AG |
| | 4-12 | PCUSUA626WREZ | Cushion | 1 | AC |
| | 4-13 | PCUSU0407WRP0 | Cushion | 2 | AA |
| | 4-14 | FGLSPA063WRY0 | Ceramic shelf | 1 | BF |
| | 4-15 | FPLT-A008WRY0 | Stirrer antenna upper assembly | 1 | AV |
| | 4-16 | FPLT-A009WRY0 | Stirrer antenna lower assembly | 1 | AV |
| | 4-17 | PCUSUA538WRPZ | Cushion | 1 | AD |
| | 4-18 | LANGQA370WRP0 | Oven lamp mounting plate | 1 | AD |
| | 4-19 | LBNDKA068WRP0 | Capacitor holder | 1 | AD |
| | 4-20 | PGIDHA054WRW0 | Water-proof cover | 1 | AF |
| | 4-21 | NSFTPA031WRF0 | Antenna motor shaft | 2 | AH |
| | 4-22 | PZETEA087WRPZ | Insulater | 1 | AE |
| | 4-23 | PCUSUA417WRP0 | Cushion | 1 | AB |
| Δ | 4-24 | MHNG-A215WRM0 | Upper oven hinge | 1 | AG |
| | 4-25 | PCUSUA413WRP0 | Cushion | 1 | AG |
| | 4-26 | PCUSUA415WRP0 | Cushion | 1 | AC |
| | 4-27 | PDUC-A729WRF0 | Air duct | 1 | AL |
| | 4-28 | PDUC-A564WRW0 | Mg exhaust duct | 1 | AP |
| | 4-29 | PCUSUA414WRP0 | Cushion | 1 | AD |
| | 4-30 | LANGKA679WRPZ | Fixing angle S | 1 | AD |
| | 4-31 | HDECQA147WRM0 | Corner cap right | 1 | AE |
| | 4-32 | LANGFA195WRW0 | Chassis support | 1 | AH |
| | 4-33 | LBSHCA012WRE0 | Cord bushing | 1 | AD |
| | 4-34 | FCOVPA032WRKZ | Stirrer cover assembly | 1 | BF |
| | 4-35 | FFIL-A005WRK0 | Air intake filter assembly | 1 | AS |
| | 4-36 | HDECEA001WRP0 | Decoration sash | 1 | AR |
| | 4-37 | HDECQA146WRM0 | Corner cap left | 1 | AE |
| | 4-38 | PCUSGA409WRP0 | Cushion | 2 | AE |
| | 4-39 | LANGQA440WRM0 | Earth angle | 1 | AE |
| | 4-40 | LANGQA512WRP0 | Thermistor angle | 2 | AE |
| | 4-41 | LANGQA593WRPZ | Blower motor angle | 1 | AH |
| | 4-42 | MSPRCA101WRE0 | Switch lever spring C | 1 | AC |
| | 4-43 | PCUSUA268WRP0 | Cushion | 1 | AA |

## DOOR PARTS

| | | | | | |
|---|---|---|---|---|---|
| Δ | 5 | DDORFA850WRK0 | Door assembly | 1 | BV |
| Δ | 5- 1 | FDORFA289WRT0 | Door panel assembly | 1 | BH |
| | 5- 2 | GCOVAA242WRY0 | Door case | 1 | BD |
| | 5- 3 | FHNDMA011WRY0 | Door lever assembly | 1 | AP |
| | 5- 4 | GCOVHA350WRF0 | Choke cover | 1 | AR |
| | 5- 5 | JHNDMA039WRM0 | Door handle | 1 | AX |
| | 5- 6 | LANGKA766WRP0 | Outside window fixing plate | 2 | AF |
| | 5- 7 | PCUSGA430WRP0 | Cushion | 2 | AM |
| | 5- 8 | PGLSPA457WRE0 | Door glass | 1 | AV |
| | 5- 9 | PPACGA142WRP0 | Door case packing | 2 | AF |
| | 5-10 | PSHEPA428WRE0 | Sealer film | 1 | AF |
| | 5-11 | PGID-0024WRF0 | Handle guide | 4 | AC |
| | 5-12 | XFPSD40P08K00 | Screw : 4mm x 8mm | 3 | AA |
| | 5-13 | XHTSD40P08RV0 | Screw : 4mm x 8mm | 4 | AA |
| | 5-14 | FANGKA200WRY0 | Latch fixing angle | 1 | AQ |
| | 5-15 | FLEVFA019WRY0 | Joint lever | 1 | AP |
| Δ | 5-16 | LSTPCA002WRM0 | Latch head | 2 | AM |
| | 5-17 | MLEVPA220WRF0 | Head lever | 1 | AM |
| | 5-18 | MSPRCA097WRE0 | Latch spring | 1 | AG |
| | 5-19 | HBDGCA114WREZ | Door badge | 1 | AK |
| | 5-20 | PGID-0025WRF0 | Handel spacer | 1 | AC |
| | 5-21 | PCUSGA486WRP0 | Cushion | 1 | AM |
| | 5-22 | PSPA-A102WRE0 | Door case spacer | 2 | AE |
| | 5-23 | XBPSD40P10K00 | Screw : 4mm x 10mm | 2 | AA |

## MISCELLANEOUS

| | | | | |
|---|---|---|---|---|
| 6- 1 | TINSMA019WRRZ | Operation manual | 1 | AH |
| 6- 2 | LHLDWQ005YBE0 | Purse lock LL | 1 | AA |
| 6- 3 | FW-VZB999WREZ | Switch harness | 1 | AP |
| 6- 4 | FW-VZC001WREZ | Main wire harness | 1 | BC |
| 6- 5 | LHLDWA040WRE0 | Wire holder A | 1 | AB |
| 6- 6 | LBNDKA079WRE0 | Wire holder | 2 | AB |
| 6- 7 | TCAUHA168WRR0 | H caution label | 1 | AH |
| 6- 8 | TCAUHA257WRR0 | S caution sheet | 1 | AE |
| 6- 9 | PZET-A018WRE0 | Terminal insulator | 2 | AC |
| 6-10 | TLABSA064WRR0 | A017 label | 1 | AC |
| 6-11 | TLABSA055WRR0 | Fuse label F10A | 2 | AE |

| REF. NO. | PART NO. | DESCRIPTION | Q'TY | CODE |
|---|---|---|---|---|
| | | **SCRE,NUTS AND WASHERS** | | |
| 7- 1 | LX-BZA131WREZ | Special screw | 4 | AB |
| 7- 2 | LX-BZA138WREZ | Special screw | 2 | AB |
| 7- 3 | XHTSD40P08RV0 | Screw : 4mm x 8mm | 14 | AA |
| 7- 4 | XONSC40P10000 | Screw : 4mm x 10mm | 1 | AA |
| 7- 5 | XOTSC40P12000 | Screw : 4mm x 12mm | 5 | AA |
| 7- 6 | XOTWW40P08000 | Screw : 4mm x 8mm | 5 | AB |
| 7- 7 | LX-BZA116WRE0 | Special screw | 2 | AD |
| 7- 8 | XOTWW40P10000 | Screw : 4mm x 10mm | 11 | AB |
| 7- 9 | XOTSD40P12000 | Screw : 4mm x 12mm | 6 | AA |
| 7-10 | LX-CZA038WRE0 | Special screw | 3 | AA |
| 7-11 | LX-EZA004WRE0 | Special screw | 2 | AA |
| 7-12 | LX-BZA041WRE0 | Special screw | 2 | AA |
| 7-13 | XJPSD40P10000 | Screw : 4mm x 10mm | 2 | AA |
| 7-14 | LX-EZA042WRE0 | Special screw | 12 | AB |
| 7-15 | XOTSD40P10RV0 | Screw : 4mm x 10mm | 3 | AA |
| 7-16 | LX-BZA064WRE0 | Special screw | 1 | AA |
| 7-17 | LX-WZA035WRE0 | Special washer | 1 | AB |
| 7-18 | XWSSD40-10000 | Washer: 4mm x 1mm | 1 | AA |
| 7-19 | XFTSD40P12000 | Screw : 4mm x 12mm | 1 | AA |
| 7-20 | LX-BZA150WREZ | Special screw | 1 | AB |
| 7-21 | XCHWW40P08000 | Screw : 4mm x 8mm | 2 | AB |
| 7-22 | XCPSD30P10000 | Screw : 3mm x 10mm | 2 | AA |
| 7-23 | XBPSD30P28KS0 | Screw : 3mm x 28mm | 2 | AA |
| 7-24 | XNESD30-24000 | Nut : 3mm x 2.4mm | 2 | AA |
| 7-25 | XCPWW30P08000 | Screw : 3mm x 8mm | 2 | AA |
| 7-26 | LX-BZA132WREZ | Special screw | 4 | AB |
| 7-27 | XOTSD40P08000 | Screw : 4mm x 8mm | 4 | AA |


MCW
Magnetron
Centrum
Waalwijk

HOW TO ORDER REPLACEMENT PARTS

To have your order filled prompty and correctly, please furnish the following information.

1. MODEL NUMBER 2. REF. NO. 3. PART NO. 4. DESCRIPTION


OVEN AND CABINET PARTS
2-4
2-2
7-5
2-4-1
7-4
2-4-2
7-2
4-30
4-43
7-6
TH3
7-3
2-5
7-6
7-8
4-26
7-25
6-6
TF3
4-2
4-25
4-38
SM
7-3
7-14
TF1
7-9
4-21
7-1
x2
7-13
1-2
OL
4-18
4-37
4-3
4-24
4-4
7-1
4-11
4-15
4-36
7-26
4-16
4-21
4-31
7-14
SM
7-3
T1
7-14
4-34
7-20
T3
T2
2-1
7-7
6-5
2-6
7-10
4-35
4-1
7-9
7-3
4-1
2-6
7-10
4-1
4-1
4-17
4-14
4-20
7-21
7-8
6-7
4-23
7-16
2-3
4-33
1-1
7-8
7-8
7-10
7-19
7-8
7-18
7-17
4-39
7-8
7-2
4-27
7-8
4-13
4-28
4-29
7-3
7-14
1-1
4-12
7-8
7-12
A2
A1
B
7-15
B
4-40
TH1
A1
A2
MG1
F2
4-13
4-40
7-22
TH2
MG2
1-5
F1
C
D
7-14
7-13
C1
C2
4-19
7-3
1-3
4-32
TF2
7-3
7-8
7-15
F4
F5
6-11
7-3
7-3
4-8
4-41
C
D
7-27
4-22
7-24
4-9
SW4
7-27
SW3
7-23
7-3
6-10
4-5
4-42
4-6
F3
SW2
1-4
SW1
6-6
4-10
4-9
4-7
SW5
7-23
BM
Magnetron
Centrum
Vaalwijk

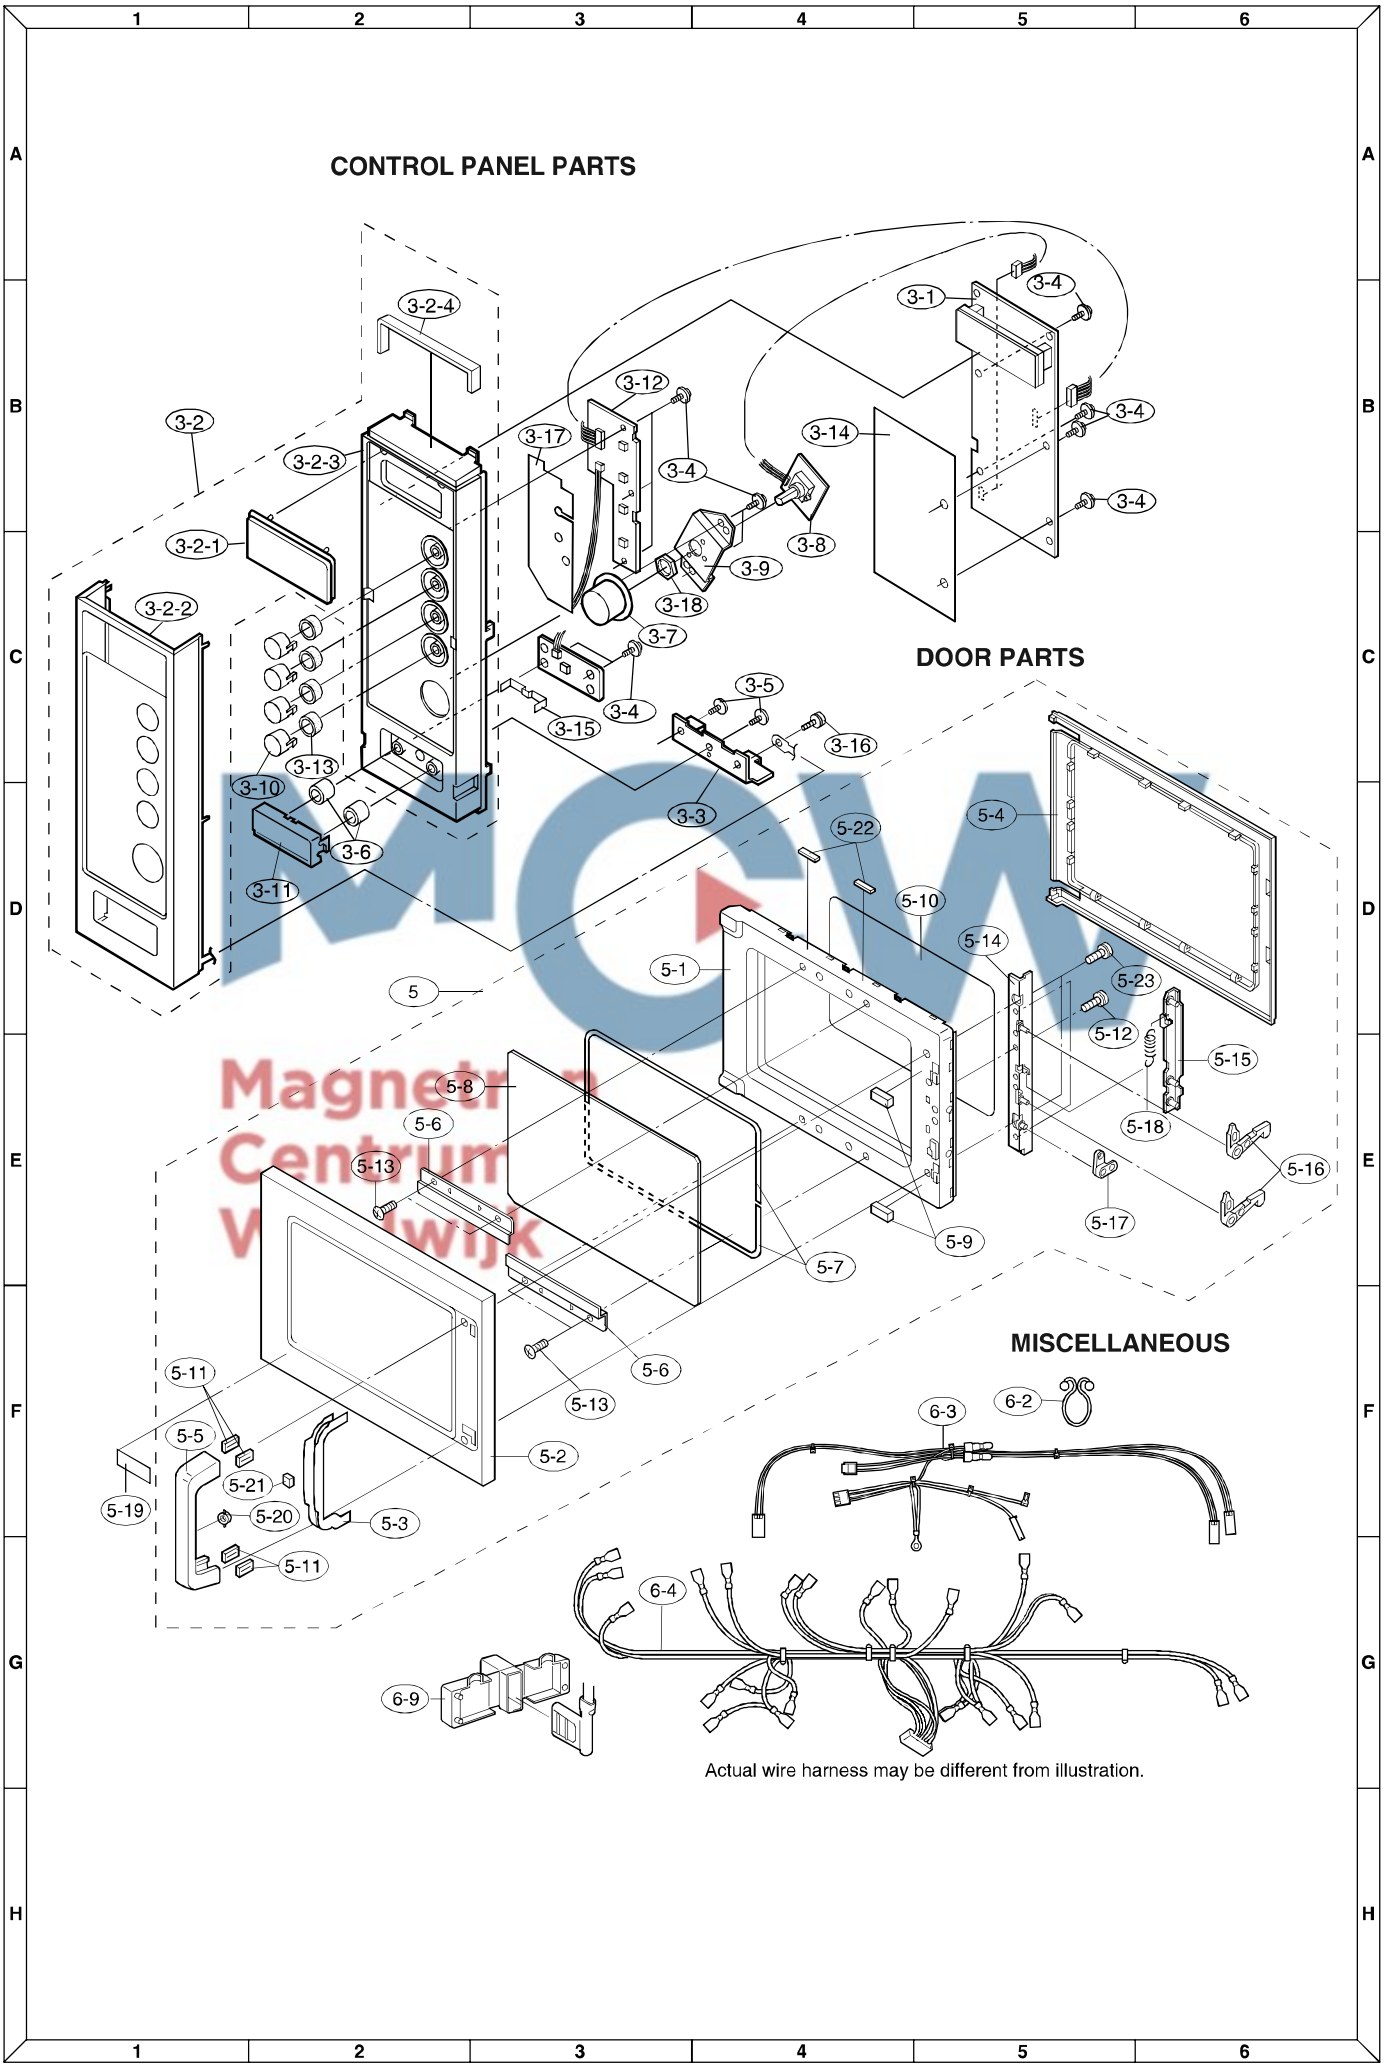
CONTROL PANEL PARTS
DOOR PARTS
MISCELLANEOUS
3-1
3-2
3-2-1
3-2-2
3-2-3
3-2-4
3-3
3-4
3-5
3-6
3-7
3-8
3-9
3-10
3-11
3-12
3-13
3-14
3-15
3-16
3-17
3-18
5
5-1
5-2
5-3
5-4
5-5
5-6
5-7
5-8
5-9
5-10
5-11
5-12
5-13
5-14
5-15
5-16
5-17
5-18
5-19
5-20
5-21
5-22
5-23
6-2
6-3
6-4
6-9
Actual wire harness may be different from illustration.